

# SIEMENS

# SIEMENS



Issued by  
Information and Communication mobile  
Haidenauplatz 1  
D-81667 Munich

© Siemens AG 2004  
All rights reserved. Subject to availability.  
Rights of modification reserved.

Siemens Aktiengesellschaft  
[www.siemens.com/sf65](http://www.siemens.com/sf65)

Designed for life

**SF65**

---

Safety precautions .....	2	Email .....	36
Overview of the phone .....	4	Voice mailbox .....	38
Display symbols .....	8	IrDA .....	39
Getting started .....	9	Surf & Fun .....	40
Switch on/off, PIN entry .....	12	Setup .....	44
General information .....	13	Organiser .....	49
Standard functions .....	15	Extras .....	50
Security .....	16	My stuff .....	52
Text entry .....	18	Customer Care .....	54
Calling .....	20	Care and maintenance .....	56
Phonebook .....	23	Product data .....	57
Call records .....	26	Guarantee certificate (UK) .....	58
Camera .....	27	Guarantee certificate (IRL) .....	59
SMS .....	29	Menu tree .....	61
MMS .....	31	Index .....	68

# Safety precautions

## Information for parents

Please read the operating instructions and safety precautions carefully before use. Explain the content and the hazards associated with using the phone to your children.



Remember to comply with legal requirements and local restrictions when using the phone. For example in aeroplanes, petrol stations, hospitals or while driving.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 20 cm/9 inches between phone and pacemaker. When using the mobile phone hold it to the ear which is further away from the pacemaker. For more information consult your doctor.



Small parts such as the SIM card, sealing stop, lens ring and lens cap can be dismantled and swallowed by small children. The phone must therefore be stored out of the reach of small children.



The mains voltage specified on the power supply unit (V) must not be exceeded. Otherwise the charging device may be destroyed.

The power supply must be plugged into an easily accessible AC mains power socket when charging the battery. The only way to turn off the charging device after charging the battery is to unplug it.



The ringtone (page 44), info tones and handsfree talking are reproduced through the loud-speaker. Do not hold the phone to your ear when it rings or when you have switched on the handsfree function (page 20). Otherwise you risk serious permanent damage to your hearing.



Do not use an optical magnifier to look at the activated infrared interface [Class 1 LED product (classification as per IEC 60825-1)].



Only use original Siemens batteries (100 % mercury-free) and – charging devices. Otherwise you risk serious damage to health and property. The battery could explode, for instance.



You may only open the phone to replace the battery (100 % mercury-free) or SIM card. You must not open the battery under any circumstances. All other changes to this device are strictly prohibited and will invalidate the guarantee.

**Important:**

Please dispose of unwanted batteries and phones as permitted by the laws in your country.



The phone may cause interference in the vicinity of TV sets, radios and PCs.



Use only Siemens original accessories. This will avoid potential risks to health or property and ensure compliance with all relevant regulations.

**Improper use will invalidate the guarantee!**

These safety instructions also apply to Siemens original accessories.

**Improved data transmission**

In order for your phone to be able to transmit data at higher speeds, it is necessary to have a good connection to the network. Transmitting data can be delayed by the process of establishing a connection. To comply with guidelines on the effects of radio waves, you should keep the phone a distance of 22 mm from your body while transmitting data.

# Overview of the phone

## ① Joystick

- ① Press vertically down on the joystick to start an application or function.
- ② Scroll left, right, up and down to navigate in the menus.
- ③ OK key. Press **briefly** to confirm an action.

### In standby mode:

- ④ Press and **hold** to access the Voice dial or Voice command.
- ⑤ Press to access functions: up (Profiles), down (Phonebook), left (Sound album), right (Picture album).

 
## ② Call key


Make calls, take incoming calls, most recent calls displayed.

## ③ On/Off/End key

- Switched off: press and **hold** to switch on.
- Press to end a call during conversation or to reject an incoming call.
- Press **briefly** to go back to the standby mode.
- Press and **hold** to switch off.

## ④ Soft keys

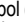 The current functions of these keys are shown in the bottom line of the display as **Text**/symbol (e.g. ) . (The keys below the display also function as soft keys.)

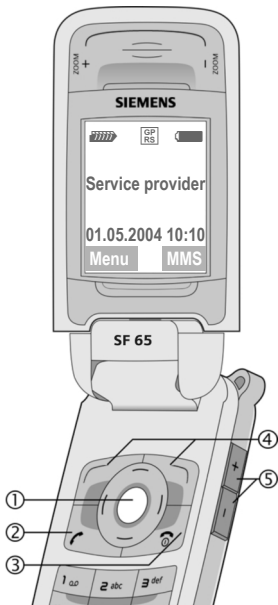

## ⑤ Volume keys

- In standby mode: Press to increase or decrease the ringer volume level.
- During a call: Press to increase or decrease the earpiece volume level.
- Receiving a call: Press either of the keys **briefly** to mute the ringer. Press and **hold** either of the keys to reject the incoming call.

① **Loudspeaker**② **Call led**

Located on the reverse side of the clamshell. Activates e.g. when you receive a call or a new MMS or SMS.

③ **Display**④ **Integrated antenna**

 
 
Do not obstruct the phone above the battery cover unnecessarily. This reduces the signal quality.

⑤ **Input keys**⑥ **IrDA interface**⑦ **Ringtone**

Press and **hold** in standby mode: switch all audible signals on/off (except alarm).

⑧ **Connection socket**

For charger, headset, etc.

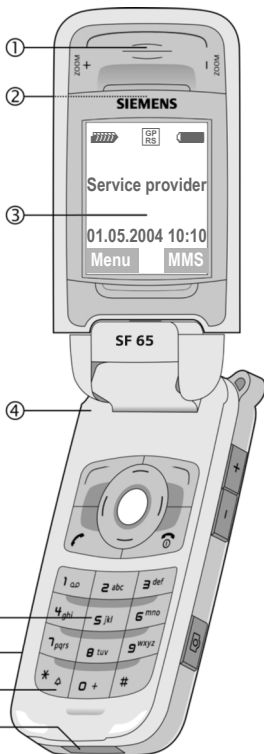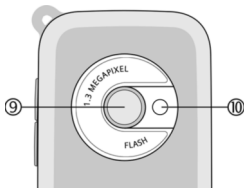⑨ **Camera lens**⑩ **Flash/Torch****Accessories**

You can find Original Siemens Accessories at: [www.siemens-mobile.com/shop](http://www.siemens-mobile.com/shop)

**Changing to camera mode:**

To change the phone from the phone mode to the camera mode:

- ① Flip the clamshell gently 180° to the right (anti-clockwise) until it is on the reverse side ①.
- ② Close the clamshell ②.

 
The camera switches automatically to the camera mode.

**Additional information**

The display can only be turned anti-clockwise!





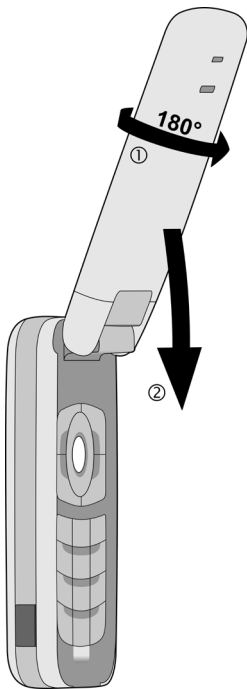

**Warning!**

 
Follow the handling instructions carefully to avoid causing damage to the display hinge. Pay special attention to the correct direction to turn the display!



## Camera functions:

(These functions are only available when the phone is in the camera mode!)

- ①  **Camera key**
  - Press to take a photo.
  - Press again to save the photo in the picture album.
  
- ②  **Volume keys**
  - In camera preview: Press to activate / deactivate the Flash to take a picture or to use as a torch.
  
- ③  **Zoom in key**
  - Zoom in the preview image.
  - In menus: Press to go back a level in the list menu.
  
- ④  **Zoom out key**
  - Zoom out from the preview image.
  - In menus: Press to go forward a level in the list menu.
  
- ⑤  **Menu key**
  - Press to open the camera options menu.
  - In menus: Press to go forward a level.
  
- ⑥  **Landscape/Portrait key**
  - Press to switch between the landscape and portrait orientation.
  - In menus: Press to go back a level.
  - Receiving a call: Press to reject an incoming call.

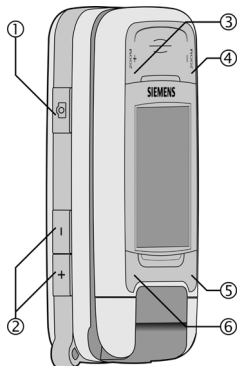

### Additional information

It is not possible to make a call when the phone is in camera mode!

### Additional information

If you receive a call, a notification will be displayed, but you need to change the phone to the phone mode to accept the call!



# Display symbols

## Display symbols (selection)



Signal strength



Battery charge level e.g. 50%



Phonebook



Call records

Surf & Fun/  
Service provider portal

All calls forwarded



Calls forwarded to mailbox



Organiser



SMS



Read



Sent



Extras



My stuff



Setup



IrDA



Ringer off



Alarm set



Activated and available



No network

## Events (selection)



Missed call



WAP alert

## Organiser events



Task



Meeting



Holiday

## Message symbols (selection)



SMS unread (white envelope)



MMS unread (yellow envelope)



E-mail forwarded



E-mail with attachment



Voice mail received

## Dynamic symbols



Homezone activated



WAP alert received



Voice mail received



MMS received (yellow envelope)



SMS received (white envelope)



SMS received, SIM memory full



Vibrator mode set



Memory full



Handset connected to another network

# Getting started

## Inserting the SIM card/battery

The service provider supplies you with a SIM card that stores all the important data for your connection. Remove the SIM card from its holder before inserting it into the phone.

- Press the back cover button on the short side of the upper end of the phone ① until the latch comes out of the slot, and remove the cover ②.



- Insert the SIM card under the metal clip, with the contact surface facing **downwards**, until it is in place. ③ (Ensure that the chamfered corner is in the correct position.) Press the metal clip over the SIM card ④.



- Place the battery sideways in the slots. First insert its right side against the right edge of the phone ⑤, then press it downwards ⑥ until it clips.



- To remove the battery, press the inner clips one after another and lift the battery from the right edge of the phone.
- To replace the back cover, hook the clips onto the hinges on the bottom of the phone ⑦ and press the cover down ⑧ until the latch catches.



#### Additional information

Please switch off your phone before removing the battery!

Only 3-V SIM cards are supported. Please contact your service provider if you have an older card.

## Charging the battery

### Charging procedure

The battery is not fully charged when delivered. Plug the charger cable into the bottom of the phone ⑨, plug the power supply unit into a mains power socket and charge for at least **two hours**.



### Charging time

A flat battery is fully charged after about **3 hours**. Charging is only possible within a temperature range of 0 °C to 45 °C. If the temperature rises/falls 5°C above/below this, the charge symbol flashes a warning. The mains voltage specified on the power supply unit must not be exceeded.

## Operating time

The operating time depends upon the conditions of use. Extreme temperatures considerably reduce the phone's standby time. Avoid placing the phone in the sun or on a heater.

Talktime: 140 to 400 minutes

Standby time: 160 to 400 hours

## Charge icon not visible

If the battery has been discharged fully, the charge icon is not immediately visible when the power supply is plugged in. It will appear with two hours. In this case the battery is fully charged after 3 to 5 hours.

**Only use the power supply unit included in the delivery!**

## Display while in use

Charge level display during operation (flat-fully charged):



A beep sounds when the battery is nearly flat. The charge level of the battery is only displayed correctly after an uninterrupted charging/discharging cycle. You should therefore **not remove the battery unnecessarily** and where possible **not finish the charging process prematurely**.

### Additional information

The power supply unit heats up when used for long periods. This is normal and not dangerous.

If the battery is removed for longer than 30 seconds, the clock must be reset.

# Switch on/off, PIN entry

## Switching phone on/off




Press and hold.

## Entering the PIN

The SIM card can be protected with a 4-8 digit PIN.



Enter the PIN using the number keys. The characters appear as \*\*\*\* to ensure that nobody else can read your PIN code on the display. Correct with .



Confirm by pressing the joystick. Logging on to the network will take a few seconds.

### Additional information

Change PIN.....page 17

Clear SIM card barring .....page 17

## Emergency number (SOS)

### Only to be used in real emergencies!

By pressing the **SOS** soft key you can make an emergency call on any network **without** a SIM card and without entering a PIN. (Please note that this option is not available in all countries.)

## Switching on your phone for the first time

### Time/date

During initial set up, the phone first prompts you to check the date and time. After that, you can set the clock so that it displays the correct time. You will not have to make this setting again.



First enter the date (day/month/year), then the time (24-hour format).



Press this key. The time and date are updated.

## Copying SIM addresses

The first time the SIM card is inserted, the entries on it can be copied into the Addressbook memory. You can interrupt the copying procedure to, for example, receive a call, and then relaunch the copying process from settings in Phonebook.

You can also copy data from the SIM card at a later time (see page 23).

## General information

### Standby mode

The phone is in **Standby mode** and is **ready for use** when the name of the service provider appears on the display.



Press **briefly** to return (long press switches the phone off). You can return to the standby mode from any situation.

### Signal strength



Strong signal.



Weak signal.

A weak signal reduces the call quality and may lead to loss of the connection. Change your location.

### Main menu

Use the following keys to navigate in the main menu.



Call up from standby mode.



Select the application symbols.



Start an application.

### Main menu options

**Options** Open menu.

Different functions are available depending on the context.

## User guide

### Menu controls

The steps needed to reach a function are shown in a **condensed form** in the user guide. For example, the condensed form for displaying the call history for all calls is as follows:




This comprises the following steps:



Open main menu.



Select , then the **Call history** function.



Press to confirm.

## Symbols

The following symbols are used to explain an operation:



Enter numbers/letters



On/Off/End key



Call key



Soft keys



Displays a soft key function.



Press vertically down on the joystick, e.g. to access the menu.



Press the joystick in the direction indicated.



Function dependent on the service provider; special registration may be required.

# Standard functions

## Option menus

Below is a summary of functions that recur in options menus.

**Options** Open menu.

<b>Edit</b>	Open the entry to edit. You cannot change the language during editing.
<b>View</b>	Display entry.
<b>Delete/ Delete all</b>	Delete entry/delete all entries after confirmation.
<b>&lt;New&gt;</b>	Create new entry.
<b>Send via...</b>	Select transmission service and medium for sending or printing.
<b>Reply</b>	A message replies to the sender, "Re" is placed in front of the subject matter and the received text is included in the new message.
<b>Save</b>	Store entry.
<b>Copy to addressb.</b>	Save entries in the current Phonebook.
<b>Rename</b>	Rename selected entry.
<b>Show</b>	Display properties of the highlighted object.



 
# Security

The phone and SIM card are protected against misuse by several security codes.

**Keep these security codes in a safe place where you can access them again if required.**

## Change codes

<b>PIN CODE</b>	Protects your SIM card (personal identification number).
<b>PIN2 CODE</b>	This is needed to set the charge detail display and to access additional functions on special SIM cards.
<b>PUK CODE</b> <b>PUK2 CODE</b>	Key code. Used to unlock SIM cards after the wrong PIN has been entered repeatedly.
<b>Barring code</b>	Used to set restrictions that prevent calling to certain types of numbers.

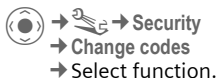

## PIN control

The PIN is usually requested each time the phone is switched on. You can deactivate this feature but if you do so, you risk unauthorised use of the phone. To be able to use all available security codes, you must have the PIN control activated. Some service providers do not permit deactivating the control.

**Select** Press.



Enter PIN.



Confirm entry.

**Change** Press.



Confirm.

-  →  → Security
- Change codes
- Select function.

## Change PIN

You can change the PIN to any 4-8 digit number you find easier to remember.



Enter **current** PIN.



Press.



Enter **new** PIN.



Repeat and confirm **new** PIN.

## Change PIN2

(Display only if PIN2 is available)

Proceed as with **Change PIN**.

## Change barring code

Proceed as with changing other codes.

## Clearing SIM card barring

If the PIN is entered incorrectly three times, the SIM card is barred. Enter the PUK (MASTER PIN) provided by your service provider with the SIM card in accordance with the instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.

# Text entry

## Text entry without T9

Press a number key repeatedly until the required letter appears. For example:



Press once **briefly** to write the letter **a**, twice to write **b** etc. Press and **hold** to write the number.



Press **briefly** to delete the letter before the cursor; press and **hold** to erase the whole word.



Move the cursor forwards/backwards.



Press **briefly**: Switch between *abc*, *Abc*, *T9abc*, *T9Abc*, *T9ABC*, 123.



Press to activate/deactivate the special characters.



Press **once/repeatedly**:

., ? ! ' " 0 + - ( ) @ / : \_

Press and **hold**: writes 0.



Writes blank.

Press **twice**: writes 1.

Press and **hold**: writes 1.

## Special characters



Press to activate/deactivate the special characters.



Navigate to the table of characters that contains the special character you need:

1	.	2	,	3	?
4	:	5	;	6	!
7	"	8	'	9	@

1	+	2	-	3	=
4	*	5	/	6	%
7	<	8	>	9	#

1	\$	2	£	3	¥
4	&	5	i	6	¿
7	(	8	)	9	_



Press a matching key in the keypad to choose the special character you need.

## Text input with T9

"T9" combines the correct word from the various key inputs.



Activate/deactivate T9.

## Write with T9

**It is best if you finish a word without looking at the display.**

You simply press the keys where the relevant letter is located **once**.



A blank space or moving to the right ends the word.

Do not use special characters such as Ä. Instead use the standard characters such as A and T9 will do the rest for you.

## T9 word suggestions

If several options are found in the dictionary for a word, the most probable is displayed first.



Press. If this word is also incorrect, press the key again.



Keep pressing until the correct word is displayed.

### Additional information



Press **briefly**: Switch between **abc**, **Abc**, **T9abc**, **T9Abc**, **123**.



Press to activate/deactivate special characters: (page 18).

T9® Text Input is licensed under one or more of the following:

U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928 and 6,011,554;

Canadian Pat. No. 1,331,057;

United Kingdom Pat. No. 2238414B;

Hong Kong Standard Pat. No. HK0940329;

Republic of Singapore Pat. No. 51383;

Euro.Pat. No. 0 842 463 (96927260.8);

DE/DK, FI, FR, IT, NL, PT, ES, SE, GB;

and additional patents are pending worldwide.

# Calling



Enter the number (always with dialling code/international dialling code).

**◀C** A **short** press clears the last digit, a **long** press clears the entire phone number.



Dial the phone number.

## End call



Press the End key **briefly**.

## Set volume



Use volume keys to regulate the volume.

## Switch to handsfree mode

A long press on the green key switches the phone to handsfree mode.

## Redial previous numbers



Press **twice**. The phone number **last** called is redialled.

Call up the redial list:



Press **once**.



Choose the phone number, then to dial press the ...



... key.

## Auto redial

### Auto redial

The phone number is dialled ten times at increasing time intervals.

## Accept call



Press.

Or

### Options

Open and select **Accept call** or **Accept in h/free**.

## Reject call



Press **briefly**.

Or

### Options

Open and select **Reject** or **Silent**.

### Additional information

Accept the call before bringing the phone to your ear in order to avoid ear damage caused by the ringtones.

Call with handsfree

#### Activate handsfree

Playback via loudspeaker (handsfree calling).

Always switch off handsfree talking before holding the phone to your ear! Otherwise, you may damage your hearing!

#### International dialling codes



Remember to add a "+" in front of the number.

## Call options

#### Options

Functions that are only available **during** the call are offered.

## Swapping between 2 calls

### Establish a second connection

#### Options

Open menu.



Select new number from phonebook.

Or



Dial in the new number directly, the current call will automatically be put on hold.

#### Options

Open menu.

#### Swap

Swap between calls.

Or



use joystick to swap between calls.

## Incoming calls during a call

You will hear the "Call waiting" tone and you can now:

- **Accept the waiting call in addition to the first**



Accept the call and put the current call on hold.

Or

#### Options

Press to accept the call.

- **Reject the waiting call**

#### Reject call

Reject the call, or transfer it to the mailbox via Transfer option in the Call options menu.

Or, use



to reject the incoming call.

- **Accept the waiting call and end the current call**

#### Accept

Accept the new call.

Or



Accept the new call with joystick.



End the call currently in progress.

## End call(s)



Press the End key.

**Yes**

Resume held call.

**No**

End all calls.

## Conference

You can call up to 5 conference participants one after the other. Once you have established a connection:

**Options**

Open menu. The current call is put on hold.



Choose the new number from Calls list or from Phonebook.

**Or**



Directly dial the new number.

**Options**

Press when the new connection is established and select **Conference**. Repeat until all participants are connected.

## End



When the End key is pressed, **all** calls in the conference are ended.

# Phonebook

You can save e.g., the names and numbers of your acquaintances in your phone as contacts. You can save the contacts either in the memory of the SIM card (**Phonebook** option) or in the phone memory (**Addressbook** option). The **Addressbook** option is set as standard.

To save your contacts, select:



## New entry

To add a new contact to your Phonebook, do as follows:



Fill in the input fields:

### ENTER NAME:

Enter first and/or last names.

### Phone number:

Always enter the phone number with dialling code. An entry will not be saved without a phone number.

### Number type:

Select the type of the new entry, e.g. mobile, home, fax.

You can also select the following:

### Select group: (in the Addressbook option)

Allocate the entry to a group (page 25).

### Email: (in the Addressbook option)

Enter the e-mail address.

### Note: (in the Addressbook option)

You can enter text, if you want to add comments about the contact.



Save the new entry.

### Additional information






International dialling codes:







Remember to add a "+" in front of the number.



## Find entry/Call

-  Open Phonebook.
-  Select **Names list**.
-   Select a name with the first letter and/or scroll.
-  Call the selected number.

## Change entry

-  Select entry in Phonebook.
- Options** View options.
-  Select desired input field.
-  Make changes.
-  Press to save the changes.

## Editing the entries

The following options are available depending on what is currently selected.

- Options** Open menu.

<b>Change</b>	You can edit the name, number and type of the selected entry.
<b>Delete</b>	You can delete the entire selected entry.
<b>Send SMS</b>	You can send an SMS to selected recipient(s).

<b>Send MMS</b>	You can send an MMS to selected recipient(s).
<b>IrDA</b>	You can send the selected entry by IrDA.
<b>Show</b>	You can view the details of the selected entry.
<b>Copy to phonebook</b> (in the Addressbook option)	You can manually copy entries from the phone memory to the SIM card.
<b>Copy to addressb.</b> (in the Phonebook option)	You can manually copy entries from the SIM card to the phone memory.
<b>Call handsfree</b>	You can call the selected recipient with the handsfree function.
<b>Voice dial</b>	You can record a Voice dial to speed access to the selected entry.
<b>Flash dial</b>	You can access a speed dial to an entry by programming a Flash dial to the selected entry.

## Settings

The following functions are available, depending on what is currently selected.

**Options** Open menu.

Select group	Select the group allocated to the contact.
Select	Select either Addressbook or Phonebook.
Delete all	Delete the entire content saved in Addressbook / Phonebook.
Copy to addressb.	Copy all entries from the Phonebook memory to the Addressbook memory.
(For standard functions see page 15)	

## Group setup

To manage your **Addressbook** entries clearly, arrange your entries. You can select a group when creating a new entry or select an existing entry to modify the group settings. You can select a melody and a picture for the group. These are displayed when a caller from the group is calling.



Open Phonebook.



Select **Names list**.



Select the required entry.



Select **Options**.



Press **Select group**.

## Own numbers

Enter "own" phone numbers for information when **Phonebook** or **Addressbook** is selected.

## Emergency call

The Emergency call is always displayed at the end of the Names list. You cannot change the Emergency call as it is predefined (see also page 12).

## Call records

Phone numbers are saved to make it easier to redial them.

## Call history

The call list can store up to 30 entries. For example calls missed, calls received or calls dialled can be listed.



Call history



Select record.



Open record.



Select phone number.

**Options / OK**

Select Call, Call back h/free, Send SMS, Send MMS, Details, Save, Delete.

### Access to the last calls



Fast access in standby mode.

## Reset

The call records are deleted.

## Durat/charges



→ Select function.

Last call records, Outgoing, Incoming, Total cost



Select.



Open report or settings.

**Reset**

Reset the selected setting.

**Cancel**

Cancel the selected setting.

## Total cost



Open menu.

### Charge rate

Enter the currency as well as the charge per unit.

### Show balance

The remaining amount of credit or units is displayed.

### Cost limit

Special SIM cards allow you or the service provider to define a credit limit.

**Reset**

Reset the selected setting

**Cancel**

Cancel the selected setting.

# Camera

You can view photos taken on the integrated camera immediately and

- use the photo as a background image.
- send the photo via MMS, IrDA or e-mail.

## Switch on

- Flip the screen gently 180 ° to the right until the screen is on the reverse side.
- Close the clamshell, see Overview of phone (page 4).
- The camera switches automatically to camera mode.
- For functions of the keys in camera mode, see Overview of phone (page 4).

### Additional information

The camera feature is automatically in use once you switch the phone to camera mode.

The current (preview) image is displayed. You will see the following in the first line from left to right:



Resolution



Night mode



Self-timer



Flash activated



Saving



Burst mode

1,5

Zoom value, e.g, 1,5

Settings prior to taking a photo:

ZOOM



ZOOM

Press to zoom in and out in the preview image.

## Pict. resolution

It is possible to set the quality of the image regardless of the preview image resolution.

**Premium:** 1280 × 960 (SXGA)

**High:** 640 × 480 (VGA)

**Wallpaper:** 128 × 160

The resolution may decrease depending on the selected digital zoom. The wallpaper is adapted to the phone's screen resolution.

## Taking a photo



Press to take a photo.



Press to save the photo.  
The photo is saved in the picture album.

**Delete**

Delete the photo.

**Send**

Send the photo by:

- IrDA
- MMS
- Email

## SlideShow

See all available photos displayed on the screen one after another. Pressing any key stops the slideshow.

## Sleep mode

If you do not use the camera for two minutes, it automatically switches to the sleep mode. Press any key to return to the preview when sleep mode is activated.

## Camera options

The following functions are available, depending on the current situation.

### Options

Open menu.

### Options

- **Settings:**  
Picture quality, sound setting, reset settings.
- **Frames:**  
Choose Default frames, Own frames, or none.
- **Colour mode:**  
e.g, black, white, sepia.
- **Pict. Album**
- **Self-timer :**  
The camera automatically takes the photo approximately 10 seconds after triggering. You hear a beep before last 3 seconds.
- **Flash:**  
Activate the flash before taking the photo.
- **Burst mode:**  
Take multiple photos with one shot.
- **Night mode:**  
Use when the exposure is very dark.
- **Picture orientation:**  
Use portrait for the phone screen and landscape for PC screen.

(For standard functions see page 15)


# SMS

You can transmit and receive very long messages (up to 760 characters) on your phone. They are automatically composed of several "normal" SMS messages of 160 characters (note the higher charges).


You can also send pictures and sounds with or without accompanying text in an SMS. Also, SMS does not support all types of pictures and/or sounds.


## Write/send

 →  → SMS → Send SMS


 Select <Add contact> to select a name in the displayed Names list or enter a new number. Repeat the procedure if you want add more contacts.

 Select <New>.

 Enter text (see also page 18) or select **Template** to use a standard message.

 Select <Add Media> if you want to insert a picture, text or a sound in the SMS.

Select from a list of possible attachments and press **OK**.

 Select **Save** if you want to save the message in the message list.

 Select **Send now** to send the SMS to the selected recipient(s).

The SMS is transmitted to the service centre from where it will be sent.

## Archive

 →  → Archive

The list of SMS messages stored in the phone is displayed.

## SMS to group

Perform the same procedure as when writing a standard SMS. Repeat the procedure as many times as necessary to add more contacts.

## Read



Arrival of a new SMS announced on the display.



To read the SMS, press the joystick or press **Read**.



Scroll through message line by line.



Select from the following list of options.

### Options

Open menu.

<b>Reply</b>	Answer the SMS now displayed immediately.
<b>Forward</b>	Forward the selected message to a chosen recipient.
<b>Delete</b>	Delete the selected message.
<b>Move to Archive</b>	Store the message in the phone memory.
<b>Call back</b>	Call the sender of the selected message.

## SMS settings

### Signature



→ → SMS → SMS settings  
→ Signature

You can enter a "signature" with a maximum of 16 characters. This signature will then be attached to each SMS except when changes are made to an existing SMS.

In SMS settings, you can also determine the settings for the following:

<b>Auto save</b>	Save the sent SMS messages automatically in the phone memory. Set <b>On</b> or <b>Off</b> .
<b>SMS centre</b>	Select the service centre number to be used as default each time you send a new SMS.
<b>Validity period</b>	Select the period within which the service centre must try to deliver the message:  1 hour, 12 hours, 1 day, 1 week, Maximum*  * Maximum period that the service provider permits.
<b>Reply path</b>	Set <b>On</b> to send the service centre number along with the SMS message, so the recipient can reply using this number
<b>Delivery Report</b>	Request delivery confirmation for sent messages.

## Standard messages



→ → SMS → Template

Standard messages can be stored in the phone and added to your other messages.

# MMS

The **M**ultimedia **M**essaging **S**ervice enables you to send texts, pictures and sounds in a combined message to another mobile phone or to an e-mail address.

Depending on your phone settings, you will either receive the complete message or only a notification with sender details and size. The actual MMS can then be downloaded manually later.

## Create

An MMS consists of the address header and the content. The content may be several pages long. Each page may contain a text, a picture and a sound. Remember that pictures and sounds may be protected.

## Create new MMS

 →  → MMS → New MMS



Select <New>.



Select <Add contact> to select a name in the displayed Names list or enter a new number or e-mail. Repeat the procedure if you want add more contacts.



Select <Add Media> to add a picture, text or a sound.



## Send MMS

Once your new MMS message is complete:



Select **Send now** to send the MMS to the selected recipient(s) immediately.

### Options

**Options** Open menu.

Add Slide	Create a new slide and add it to your slideshow.
Next slide	Move to the next slide.
Previous slide	Move to the previous slide.
Edit Subject	Edit and change or enter the subject of your message.
Delete slide	Delete the selected slide.
Save as draft	Save your message as a draft, if you want to edit, complete and send it later on.
Save as template	Save created MMS as a template. See also below.
Slide duration	Change the value of the slide duration and set a delay between each slide.
Preview MMS	Preview the slides created.

(For standard functions see page 15)

## Templates



→  → MMS → Templates

MMS templates are saved MMSs without an address. They can be sent as new MMS messages or used as part of a new MMS. A maximum of 99 templates can be saved depending on the memory available in the phone.

Create templates by writing a new MMS or using an MMS that you have already received.

**Options** Open menu and select **Save as template**.

## Receive



Arrival of new MMS/notification announced on the display.

You can select automatic or manual retrieval mode. (See Settings below.)

### Additional information

In case the size of the MMS download is bigger than the memory available, the phone gives you a notification. Delete some data in order to free memory for the new MMS.

**Options** open and select **Read** to read the MMS or press **OK**.

The sender of the message may have asked for a **Read Report**.



Press **OK** to send a report or press **Delete** to remove the report.

## Read

An MMS has been received in full.



Select **Inbox** and select the required MMS.



Press **OK** to access the **Player options**:

<b>Play</b>	Switch back to the Automatic mode, the MMS then plays as a continuous slideshow.
<b>Previous Slide</b>	Move to the previous slide.
<b>Next Slide</b>	Move to the next slide.
<b>Rewind</b>	Move to the first slide.
<b>Save picture</b>	Detach the picture from the current slide and save it in the <b>Picture album</b> .
<b>Save sound</b>	Detach the sound of the current slide and save it in the <b>Sound album</b> .
<b>Close</b>	Close the MMS and go back to the <b>Inbox</b> .

## Manage folders

You can use four different folders. The active folder is the one you last selected.

**Drafts** Lists all MMS messages you save as drafts, or which were automatically saved if you quit the MMS menu before saving or sending the MMS. You can select: **Play message, Edit MMS, Send MMS and Delete**.

**Templates** Lists all MMS messages you save as templates. You can select: **Play message, Edit MMS and Delete**.

**Outbox** Lists all the MMS messages you have sent or created but not sent yet. You can select: **Play message or Delete, Forward or Re send MMS to someone, or view the MMS Details of the messages**.

**Inbox** Lists all the **Delivery report, Read report, MMS read and MMS deleted**. You can select: **Read or Delete reports and notifications**. You can also select: **Play message, Reply to or Forward the MMS message or view MMS Details or Delete the MMS message**.


## Settings



### Select profile

Five MMS profiles can be set. The sending properties are specified in these profiles. If the setting has not yet been set, you will receive the necessary data from the service provider or:

[www.siemens-mobile.com/sf65](http://www.siemens-mobile.com/sf65)

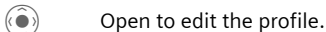

## Application settings

Set the MMS dispatch to suit your requirements:

<b>Delivery Report</b>	Request delivery confirmation for sent messages.
<b>Read Report</b>	Request confirmation that the MMS has been read.
<b>Auto save</b>	Save the MMS messages sent from the <b>Outbox</b> automatically. Set <b>On</b> or <b>Off</b> .
<b>Validity period</b>	Select the period within which the service centre must try to deliver the message: <b>1 hour, 12 hours, 1 day, 1 week, Maximum*</b> * Maximum period that the service provider permits.
<b>Slide duration</b>	Select the duration between the slides of the MMS.
<b>Retrieval mode</b>	You can choose to receive a complete MMS or only a notification of its arrival. <b>Manual:</b> Connect manually to the server by selecting the notification in the <b>Inbox</b> , selecting <b>Read</b> to download, then <b>Play</b> . <b>Automatic:</b> Received MMS messages are placed in the <b>Inbox</b> . Select the message and then <b>Play</b> .

## Network settings

Network account is used to select a connection profile of the networks you have set.

<b>Bearer:</b>	Select the type of network used when launching a connection: <b>GSM</b> , <b>GPRS</b> or <b>GPRS first</b> .
----------------	--

<b>MMS center</b>	Enter the MMS address of the server to which you connect.
-------------------	---

<b>Gateway Address/ Gateway Port</b>	Enter both the IP and Port numbers of the server's gateway.
--	---

All the MMS settings should be set when you buy your phone. Please contact your network provider.

# Email

Your telephone has an e-mail program (client) with which you can write and receive e-mails. Depending on which e-mail you wish to read, select the respective mailbox.

## Write/send



Enter address data:

<Add Media>

Validate the list of addresses.

<Add contact>

Add addressees to the list. If you have saved your contacts in the Addressbook, you can select the addressees from the Names list displayed for selection.

**SUBJECT:** Enter the heading of the e-mail.

**Attach file:** Add text files, pictures and sounds as attachments.

To send:

- Options** Select.
- Save** Save the e-mail.
- Send now** Send immediately.
- Edit mail** Enter text.

## Receive/read



Before an e-mail can be read, it must be retrieved from the server.

**Details** See detailed content of the header.

**Get mail** Receive selected e-mail from the server.

**Delete** Delete the selected e-mail.

**Add to addressbook**

Save the sender's address to Addressbook.

**Re:** Reply to the e-mail.

**Fwd:** Forward the e-mail.

## Setting



Before using this service, you must set the server access and your e-mail options. You will receive the necessary data from your service provider or: [www.siemens-mobile.com/sf65](http://www.siemens-mobile.com/sf65)

### Network access

Set the type of network used with e-mail connections.

#### Network

**GSM** The phone will only use GSM bearers for e-mail connections.

**GPRS** The phone will only use GPRS bearers for e-mail connections.

**GPRS first** The phone first tries to connect to a GPRS bearer. If this is not available, then to a GSM bearer.

### GSM settings

You can change the GSM settings.

### GPRS settings

You can change the GPRS settings.

### Email server

Set the required settings to connect to your e-mail server.



Enter your **Login, Password** and **Email address**.

### Advanced

The advanced settings such as POP3 address, SMTP address and DNS address are usually already set, so you should not have to change these settings. For more information on the advanced settings, contact your service provider.

# Voice mailbox



If you have a mailbox, a caller can leave a voice message for you:

- if your phone is switched off or not ready to receive
- if you do not want to answer
- or if you are making a phone call.

You may have to register for this function and set it manually.

## Setup



The service provider supplies you with two phone numbers:

### Save mailbox number

 
Call this phone number to listen to your voice messages.



Enter the phone number and confirm with **OK**.

### Save call divert number

Calls are transferred to this phone number.

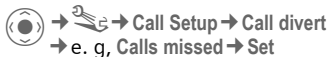

Enter the phone number and register it on the network by pressing **OK**.

## Listen to message



A new voice message can be announced as follows, depending on the service provider:



Symbol plus beep.

Or



Notification via SMS plus beep.

Or

You receive a call with an automatic announcement.

Call your mailbox and play the message(s) back.



Press and **hold** (if necessary enter mailbox number once).

## SMS broadcast



Some service providers offer information services (info channels, **Cell Broadcast**). If reception is activated you will receive messages about the activated topics in your **Topics**.

## IrDA

You can receive and send data to and from other IrDA-compliant devices such as a PC or a PDA.

The types of data you can exchange via IrDA include name cards, events, pictures, sound files or Java™ files. However, you can only download, but not send Java™ files.

Make sure that the distance between two IrDA devices does not exceed 30 cm and that nothing obstructs the IrDA beam.

### Additional information

The data exchange may fail if the IrDA link is broken, the transferred file is too large, the phone does not connect before the time out is reached, or you cancel the action.

## Receiving data via IrDA



Receive data

**Delete**

Delete the received data.

**Save**

Save the received data.

**Show**

Display the received picture or play the received sound.

## Connecting to Windows® PCs using IrDA



Data/Fax

## Connecting to Windows® PCs

You can connect your phone using IrDA or a data cable (Accessories) to a Windows® PC. The Windows® PC program MPM (Mobile Phone Manager) enables you to upload/download pictures and sounds. You can download the Mobile Phone Manager from the Internet at [www.siemens-mobile.com/sf65](http://www.siemens-mobile.com/sf65)



# Surf & Fun

Get the latest information from the Internet that is specifically adapted to the display options of your phone. In addition, you can download games and applications to your phone. Internet access may require registration with the service provider.

## WAP



The browser is activated with the preset option as soon as you access the function (**Browser settings**, page 41; may be specified/pre-assigned by the service provider).

## Browser menu

**Options** Open the menu.

Homepage	Call up the preset homepage or the current profile (page 41).
Bookmarks	Display bookmarks stored in the phone; save bookmark.
Go to URL	Enter a URL.
Push Inbox	Select a message to be displayed.
Settings	Browser settings (page 41).

## End connection



Press **briefly** the **End key** / Press and **hold** the right **soft key** to close the connection and the browser.

## Navigation in the browser



- Select a link.
- Settings, status on/off.



- One input field/link forward/back.
- Scroll one line.



- One input field/link forward/back.
- Scroll one line.

## Display symbols in the browser



GSM online



GPRS online

## Enter text/special characters

To enter text/special characters, see Text entry (page 18).

## Browser settings



**Options** Open menu.

**Settings** Select.

<b>Select profile</b>	The list of profiles is displayed for activation/setting (see below).
<b>Network</b>	Set protocol parameters, e.g. select network access and the bearer or access security settings.
<b>Browser Options</b>	Select whether you want to download pictures for displaying.
<b>Rename profile</b>	Rename the selected profile.
<b>Cache</b>	Delete the content of the cache.

## Profiles

Preparation of the phone for Internet access depends on your service provider:

### Profile preset

In most cases, access profiles have already been created for one or more service provider(s).



Select profile.



Activate profile.

## Set profile manually

You will receive the necessary data from the service provider or:

[www.siemens-mobile.com/sf65](http://www.siemens-mobile.com/sf65)

## Bookmarks



URLs stored in the phone are displayed. New bookmarks can be saved. You can manage the bookmarks in folders.

## Wallbreaker



In the brick game, you destroy the bricks by hitting them with the ball. Destroying all the bricks gets you to the next level.



Move the racket left or right.



Launch the ball left or right.



Pause the game.

The game pauses for 2 minutes, after which the screen returns to the standby mode and the game is over.

## Games & more



Games and applications are offered on the Internet. Your phone features Java™. This enables you to download Java™-compatible applications to your phone from the network. Most applications include instructions. Some applications and games are already pre-installed on your phone. You will find these listed at: [www.siemens-mobile.com/sf65](http://www.siemens-mobile.com/sf65)

### Settings



#### Auto. start

Select Auto. start to automatically launch the installed application when the installation is complete.

-  Set Auto. start on/off.
-  Confirm selection.

### Network access

#### Network account

You can select one of the network profiles you have defined in Setup (page 44).

**Network** You can select the type of network used when launching a connection, such as GSM or GPRS.

#### DNS address

You can enter the DNS address of the external data network you wish to connect.

## Requirements

WAP profile (page 41) and access (page 48) must be configured.

## Download

Select the correct access depending on whether you are loading games or applications:



In addition to URLs and service providers for the download, any available applications/games and folders will be displayed.

**Additional information**

You can use the browser to download applications (e.g. ringtones, games, images, animations) from the Internet.

Siemens excludes all warranty and liability claims in respect of or in connection with any applications subsequently installed by the customer and any software not included in the original delivery package. This also applies to functions enabled subsequently at the customer's instigation. The purchaser bears sole risk for the loss of, damage to, and any defects arising in, this device or the applications and for any direct damage or consequential damage of whatever nature resulting from the use of this application.

For technical reasons, such applications and subsequent enabling of certain functions are lost in the event of the device being replaced/re-supplied and may be lost if it is repaired. In such cases, the buyer is required to download or release the application again. These applications are then exclusively intended for your phone and cannot be transferred from this even to create a backup.

Siemens does not warrant, guarantee or accept any liability for the customer's ability to download or enable applications again or to do so free of charge. It is recommended from time to time to back up applications on the PC using the "Mobile Phone Manager" ([www.siemens-mobile.com](http://www.siemens-mobile.com)).

# Setup

## Profiles



Several settings can be stored in a phone profile, e.g., in order to adapt the phone to the surrounding level of noise.

Five standard profiles are provided with default settings. They can be changed however: **Normal envi.**, **Meeting**, **Noisy environ.**, **Car Kit**, **Headset**.

### Profile settings



Select profile.



Confirm selection.

### Car Kit

If an original Siemens Car Kit is used, the profile is switched on automatically when the phone is connected to the Car Kit.

### Headset

The profile is only switched on automatically if an original Siemens Headset is used (see also accessories).

## Display



### Language

Set the language of the display text.

### Wallpaper

Set wallpaper graphic for the display.

### Animations

You can remove any of the animations used.

### Backlight

You can set the keypad/screen backlight to switch off after 60 seconds.

## Sounds



Set the tones on the phone to suit your requirements.

### Ringer volume

Set the ringer volume level.

### Ring tone

Select the ring tone.

## Key tones

Activate/deactivate the key tone. When activated, you hear a tone each time you press a key.

## Equaliser

You can change the audibility either via the equaliser or during a call.

## Sound alerts

Activate/deactivate the sound alert. The list of possible sound alerts is displayed for selection.

### 1 minute beep

During the call, you (and only you) will hear a beep every minute so you can check the call's duration.

## Silent alert

Activate/deactivate the silent alert. You can activate the silent alert function as an alternative to the ring tone. This function is deactivated when the battery is being charged and accessories are connected (except the Headset).



You can also press and hold this key in standby mode to switch all audible signals on/off.

## SMS/MMS ringer

Activate/deactivate the SMS/MMS ringer if you wish the phone to signal you that you have received a new message. The list of possible message alerts is displayed for selection.

### Additional information

Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing from loud ringtones.

## Call Setup



### Hide identity



If activated, your phone number does not appear on the other party's display (depending on the service providers).

### Call waiting



If you are registered for this service, you can check whether it is set and you can activate/deactivate it.

### Call divert

You can specify when calls should be transferred to your mailbox or to other numbers.

## Set up call transfer (example)

### Calls missed



Select **Calls missed**. (Includes the conditions **Not reachable**, **No reply**, **Busy**, for other possibilities, see below).



Confirm and select **Set**, then enter the phone number to which the call will be transferred.



Confirm. The network confirms the setting.

### All calls



All calls are transferred.




Icon in the top line of the display in standby mode.

Other possibilities for transfer:

**Not reachable**, **No reply**, **Busy**, **Fax calls**, **Data calls**

## Any key to answer

Incoming calls can be accepted by pressing any key (except for )

## Info at call end

Displays call information after the call.

## Voice mailbox

Stores the received voice mail.

## Open to answer

You can accept the call once you have opened the clamshell.

## Auto redial

The phone redials the number until it is reached or until 10 attempts have been made.

## Phone setup



→ Phone setup  
→ Select function.

## Auto. switch off

The phone switches off each day at the set time. You can set the phone to switch off each day, only once, and each day except the weekend.

## Auto. switch on

The phone switches on each day at the set time. You can set the phone to switch on each day, only once, and each day except weekend. The phone asks for the PIN code as usual.

### Additional information

When using the Auto. switch on function, remember the restrictions of usage of the phone in e.g., aeroplanes!

## Hotkeys

You can set speed dial to access your favourite functions on the phone keys from 2 – 9.

## Voice command

Record a voice command with which you can activate your favourite functions.

## Voice dial

Record a voice dial to speed access to a wanted entry in your Phonebook.

## Time/date



### Set time

Set the time.

### Set date

Set the date.

### Time zone

Select a time zone.

### Thai

Switch between Thai/Buddhist year.

### Daylight saving

Activate/deactivate the daylight saving.

## Security



### Public names



Restrict calls to SIM-protected numbers in the Phonebook.

### Change codes

Access PIN control. For description, see page 16:  
**Change PIN, Change PIN2, Barring code**



## Call barring



Restrict different types of calls.

### Calls dialled

All outgoing calls except emergency numbers are barred.

### International (Outgoing international)

Only national calls can be made.

### Out.int.x.home (Outgoing international without home country)

No international calls, only calls to the home country.

### Incoming

The phone is barred for all incoming calls.

### When roaming

You will not receive calls when outside your home network.

### Status

Status check for network barring.

## Network



→ Network

→ Select function.

## Data calls

When activated, you can manage several sets of WAP, MMS and Java profiles. The list of profiles is displayed for selection.

The phone default setting varies from service provider to service provider. You will receive any data necessary from the service provider or: [www.siemens-mobile.com/sf65](http://www.siemens-mobile.com/sf65)

## GPRS settings

You can see if the network GPRS is currently attached.

### GPRS

(General Packet Radio Service)

GPRS is a new method for transmitting data faster in the mobile network. For symbols in the display, see page 8.

## Preferred net

Set the service providers you prefer when you leave your home network.

## Register again

When selecting Register again, you can choose either manual or automatic.

### Available networks

You can see the list of GSM networks currently available, if you want to register manually.

# Organiser

 →  → Select function.


## Calendar

You can enter events in the calendar. The time and date must be set correctly.

The calendar offers you three views: Month view, Week view, and Day view.

The various entries are colour-coded. Events are shown as icons on the horizontal hour/day division.

Navigation:

 Scroll between Month/Week/Day.

## Events

Events are displayed in chronological order in a list.

### Enter new event

<New> Select.

#### Profiles



**Task:** Text input for description.



**Meeting:** Text input for description.



**Holiday:** Enter start and end date.

Different input/selection fields are displayed depending on the type.

### Delete old events

 →  → Select function.

## Task

A task is displayed like other events in the agenda of the selected day. However, unlike other events it does not require a time. When no time is entered, the task appears at the top of the list every day until it is marked as completed.


## Extras

 →  → Select function.

## Services




Your service provider may offer applications such as mobile banking, share prices, etc. via the SIM card.

 Symbol for SIM services.


For further information, please contact your service provider.


## Alarm clock


There are three alarm clocks available. The list of possible alarm clocks is displayed for selection. The alarm rings at the time you set, even when the phone is switched off.

 Activate (/deactivate) the alarm.


 Confirm setting.

 Set the time for the alarm call (hh:mm).

 Navigate to the frequency options.

 Select either Daily, On weekdays, or Once.

 Confirm setting.

 Set alarm type.

 Confirm setting.

You can set the alarm to repeat with Snooze.

### Additional information



Alarm clock, alarm set.

An alarm sounds even when the phone is switched off. The phone does not go to standby mode. To deactivate it press any key.

## Calculator

The calculator can be used in a basic version and with an extended range of functions.



Enter number(s).



Press to enter -.



Press to enter +.



Press to enter x.



Press to enter /.



Press to compute.

## Unit converter

You can convert from euros to your national currency and from your national currency to euros.



Enter the value you want to convert.



Press and **hold** to add a decimal point.



Press to convert.

### Additional information

The following functions are only available when Chinese language is set on.

## Lunar calendar



You can see the corresponding dates between the Gregorian calendar and Chinese calendar.



Enter Gregorian date.



See the corresponding date in lunar mode.

You can see the date in year-month-day mode with the corresponding lunar symbols.

## Horoscope



You can read your horoscope for today or for some other day. First set your date of birth or your constellation.

### Setting sign



Select settings to enter your sign.



Choose your star sign among the horoscopes.

Or



Enter your date of birth.



Confirm setting.

## Displaying horoscope



See horoscope of the day.

Or



Enter a date to see the horoscope of a chosen day.

## Chinese festivals



You can find information on the six next major Chinese festivals.



Display the festivals from today.



Enter the date you want to display the festivals from.

## My stuff





 →  → Select function.

### Memory status

You can display the percentage of memory available in your phone. You can also check which type of data requires plenty of memory space.





### Voice memo

You can record a maximum of 1 minute sound as a voice memo. Depending on the memory status, you can record up to 20 different sounds.

-  Select <New> to record a new sound.
-  Confirm the recording.
-  Play the recording by selecting it in the list.
-  Select **Options** to delete or rename the recording.

## Sound album

You can manage and listen to the sounds stored in your phone.

-  Select the sound.
-   Increase/decrease the volume level.
-  Select **Options**.

### Sound processing

Depending on the context you can have the following **Options**:

- Rename** Rename the selected sound.
- Delete** Delete the selected sound.
- Set as ringer** Set the selected sound as a ringer.
- As SMS/MMS ringer** Set the selected sound as a message ringer.
- Send via...** Send the selected sound by Email, MMS or IrDA.

## Pict. Album

You can manage and display the pictures stored in your phone.



Select the picture.



Display the picture.



Select **Options**.

## Picture processing

Depending on the context you have the following **Options**:

**Rename** Rename the selected picture.

**Delete** Delete the selected picture.

**Edit picture** Change the selected picture (see below).

**Rotate** Rotate the entry point of the selected picture.

**Set as wallpaper** Set the selected picture as a wallpaper.

**Send via...** Send the selected melody by Email, MMS or IrDA.

## Picture editing

You can add text, a frame or an icon in the selected picture.



Select to add text/frame/icon.



Press **briefly** to move the object of 1 pixel or press and **hold** to move the object of 5 pixels to the required direction.



Confirm adding the object to the picture.

# Customer Care

We offer fast, individual advice! You have several options:

Our online support on the Internet:

**www.siemens-mobile.com/  
mobilescustomer care**

We can be reached any time, any place. You are given 24 hour support on all aspects of our products. Here you will find an interactive fault-finding system, a compilation of the most frequently asked questions and answers, plus user guides and current software updates to download.

When calling customer service, please have ready your receipt and the phone identity number (IMEI, to display press \*#06#), the software version (to display, press \*#06#, then **About**) and if available, your Siemens Service customer number.

You can also get personal advice about our range of products on our Premium Hotline:  
**United Kingdom** ..... **0906 9597500**  
(0.75 £ per minute)

Qualified Siemens employees are waiting to offer you expert information about our products and installation.

In some countries repair and replace services are impossible where the products are not sold through our authorised dealers.

If repair work is necessary, please contact one of our service centres:

Abu Dhabi	0 26 42 38 00
Argentina	0 80 08 88 98 78
Australia	13 00 66 53 66
Austria	05 17 07 50 04
Bahrain	40 42 34
Bangladesh	0 17 52 74 47

Belgium	0 78 15 22 21
Bolivia	0 21 21 41 14
Bosnia Herzegovina	0 33 27 66 49
Brazil	0 80 07 07 12 48
Brunei	02 43 08 01
Bulgaria	02 73 94 88
Cambodia	12 80 05 00
Canada	1 88 87 77 02 11
China	0 21 38 98 47 77
Croatia	0 16 10 53 81
Czech Republic	2 33 03 27 27
Denmark	35 25 86 00
Dubai	0 43 96 64 33
Egypt	0 23 33 41 11
Estonia	06 30 47 97
Finland	09 22 94 37 00
France	01 56 38 42 00
Germany *	0 18 05 33 32 26
Greece	80 11 11 11 16
Hong Kong	28 61 11 18
Hungary	06 14 71 24 44
Iceland	5 11 30 00
India	22 24 98 70 00 Extn: 70 40
Indonesia	0 21 46 82 60 81
Ireland	18 50 77 72 77
Italy	02 24 36 44 00
Ivory Coast	05 02 02 59
Jordan	0 64 39 86 42
Kenya	2 72 37 17
Kuwait	2 45 41 78
Latvia	7 50 11 18
Lebanon	01 44 30 43
Libya	02 13 50 28 82
Lithuania	8 52 74 20 10
Luxembourg	43 84 33 99
Macedonia	02 13 14 84
Malaysia	+ 6 03 77 12 43 04
Malta	+ 35 32 14 94 06 32
Mauritius	2 11 62 13
Mexico	01 80 07 11 00 03
Morocco	22 66 92 09
Netherlands	0 90 03 33 31 00
New Zealand	08 00 57 43 63
Nigeria	0 14 50 05 00
Norway	22 70 84 00
Oman	79 10 12

\* 0,12 Euro/min.

---

Pakistan .....	02 15 66 22 00	Spain.....	9 02 11 50 61
Paraguay .....	8 00 10 20 04	Sweden .....	0 87 50 99 11
Philippines .....	0 27 57 11 18	Switzerland .....	08 48 21 20 00
Poland.....	08 01 30 00 30	Taiwan .....	02 23 96 10 06
Portugal .....	8 08 20 15 21	Thailand .....	0 27 22 11 18
Qatar.....	04 32 20 10	Tunisia .....	71 86 19 02
Romania .....	02 12 04 60 00	Turkey.....	0 21 65 79 71 00
Russia.....	8 80 02 00 10 10	Ukraine .....	8 80 05 01 00 00
Saudi Arabia .....	0 22 26 00 43	United Arab Emirates.....	0 43 66 03 86
Serbia .....	01 13 07 00 80	United Kingdom .....	0 87 05 33 44 11
Singapore .....	62 27 11 18	USA .....	1 88 87 77 02 11
Slovak Republic.....	02 59 68 22 66	Vietnam.....	84 89 20 24 64
Slovenia .....	0 14 74 63 36	Zimbabwe .....	04 36 94 24
South Africa .....	08 60 10 11 57		



# Care and maintenance

Your phone has been designed and manufactured to the highest of standards and should be treated with great care. The suggestions below will help you enjoy your phone for many years.

- Protect your phone from moisture and humidity! Precipitation, humidity and liquids contain minerals that will corrode electronic circuits. Should your phone nonetheless become wet, disconnect it immediately from any power supply, remove the battery and leave the open phone to dry at room temperature!
- Do not use or store the phone in dusty, dirty areas. Its moving parts may become damaged.
- Do not store your phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries and warp or melt certain plastics.
- Do not store your phone in cold areas. When the phone warms up again (to its normal ambient temperature), moisture can form inside the phone, which may damage electronic circuit boards.
- Do not drop, knock or shake your phone. Rough handling can damage internal circuit boards!
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone!

The suggestions given above apply equally to your phone, battery, charger and all accessories. If any of these parts are not working properly, take them to your nearest qualified service outlet. The personnel there will assist you and, if necessary, repair the device.

## Battery quality declaration

The capacity of your mobile phone battery will reduce each time it is charged/discharged. Storing the battery at temperatures that are too high or too low also causes a gradual loss of capacity. As a result the operating time of your mobile phone may be considerably reduced, even after the battery has been fully charged.

The battery is, however, designed to be capable of being charged and discharged for a period of six months from the date when the phone was purchased. Following this six-month period, we recommend replacing your battery if you experience a significant drop in performance. Please buy only Siemens original batteries.

## Display quality declaration

For technological reasons, a few small dots with different colours may appear in the display in exceptional cases.

Please note that the appearance of brighter or darker dots generally does not mean that a fault has occurred.

# Product data

## Declaration of conformity

Siemens Information and Communication mobile hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (R&TTE). The declaration of conformity (DoC) concerned has been signed. Please call the company hotline if you require a copy of the original, or visit:

[www.siemens-mobile.com/conformity](http://www.siemens-mobile.com/conformity)

CE 0168

## Technical data

GSM class:	4 (2 watt)
Frequency range:	880 - 960 MHz
GSM class:	1 (1 watt)
Frequency range:	1,710 - 1,880 MHz
GSM class:	1 (1 watt)
Weight:	100 g
Size:	92 × 45 × 24 mm (99 ccm)
Li-Ion battery:	650 mAh
Operating temperature:	-10 °C to +55 °C
SIM card:	3.0 V

### Phone ID

You will need the following details if you lose your phone or SIM card:

The number of the SIM card (on the card):

.....

15-digit serial number of the phone  
(under the battery):

.....

The customer service number of the  
service provider:

.....

### Lost phone

If you lose your phone or SIM card contact your service provider immediately to prevent misuse.

## Operating time

The operating time depends upon the respective conditions of use: Extreme temperatures considerably reduce the phone's standby time. Avoid placing the phone in the sun or on a heater.

**Talktime: 140 to 400 minutes**

**Standby time: 160 to 400 hours**

Action taken	Time (min)	Reduction of stand-by time by
Calling	1	85–180 minutes
Light *	1	30–60 minutes
Network search	1	10–20 minutes

\* Key input, games, organiser etc.

## Guarantee certificate (UK)

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casings, small parts on casings, protective coverings where included in the scope of delivery), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user manuals.
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.

- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom the Guarantee is issued by Siemens plc, Siemens House, Oldbury, Bracknell, Berkshire, RG12 8FZ.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Siemens telephone service. The relevant number is to be found in the accompanying user guide.

## Guarantee certificate (IRL)

 
Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

 
- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casings, small parts on casings, protective coverings where included in the scope of delivery), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
  - The device is opened (this is classed as third party intervention).
  - Repairs or other work done by persons not authorised by Siemens.
  - Components on the printed circuit board are manipulated.
  - The software is manipulated.
- Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.).
- Devices fitted with accessories not authorised by Siemens.
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by Siemens Ireland Limited, Ballymoss Road, Sandyford Industrial Estate, Dublin 18 - The Republic of Ireland.

 
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customer's Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Siemens helpdesk on 1850 777 277. This number is also to be found in the accompanying user guide.

 
# Menu tree

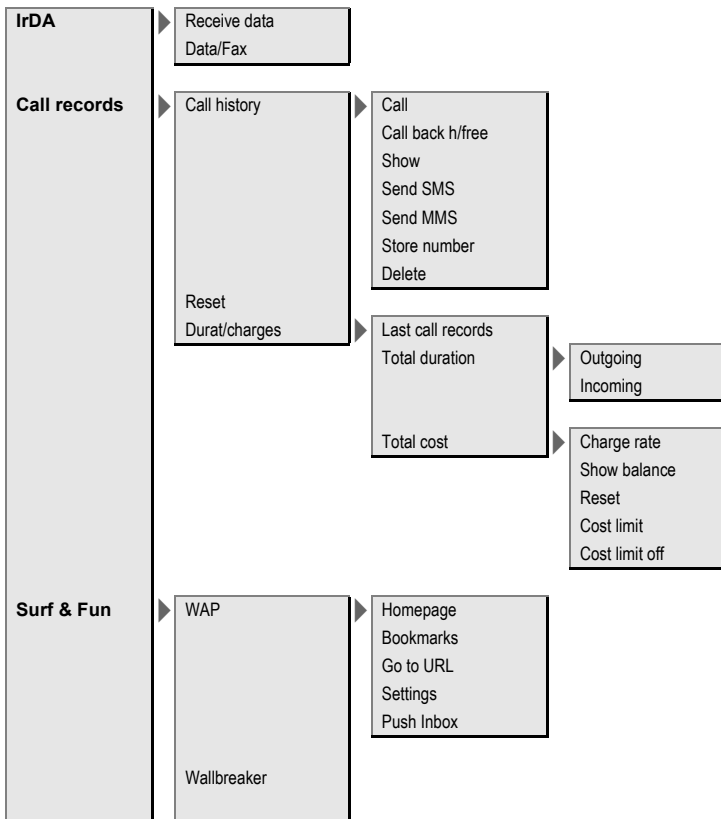 


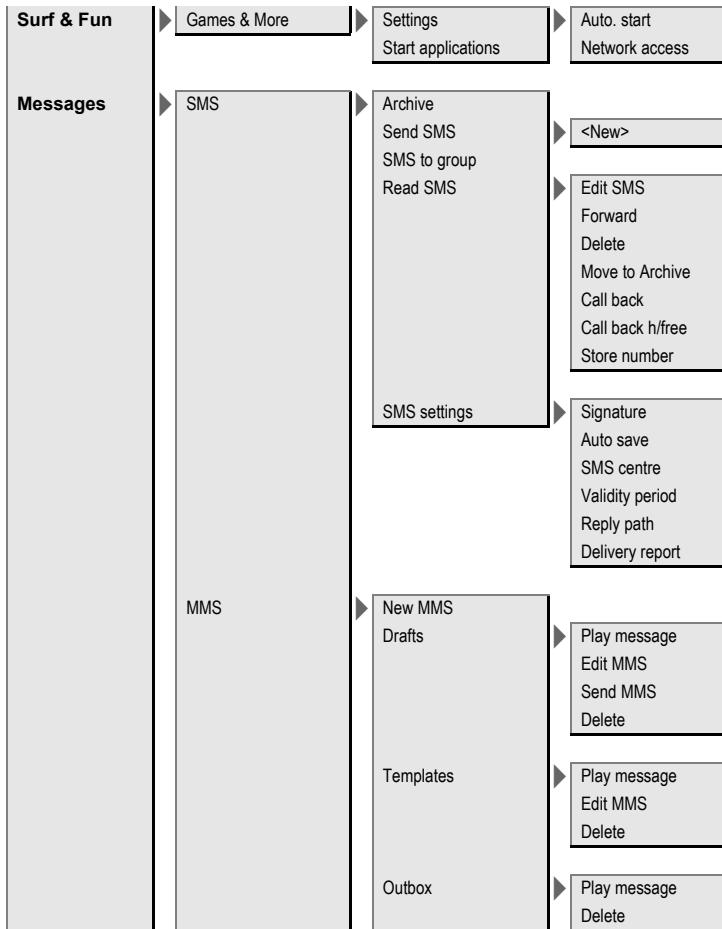 


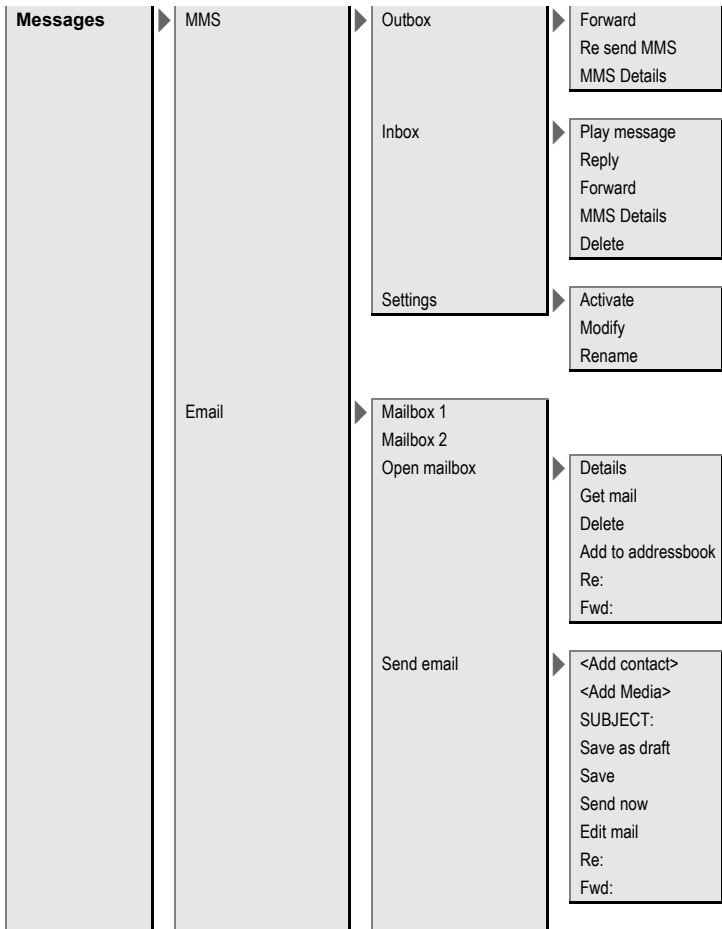 




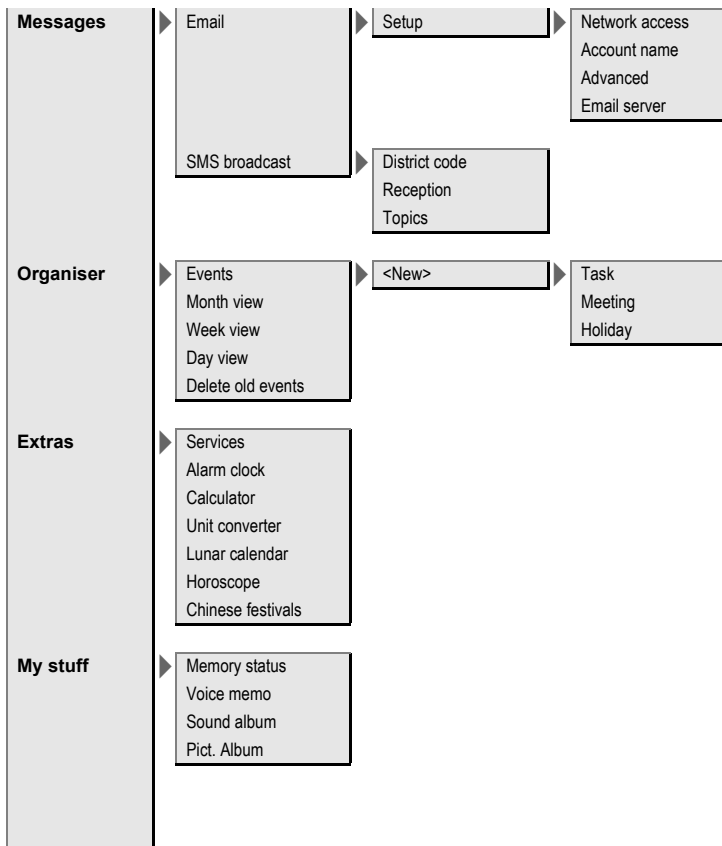

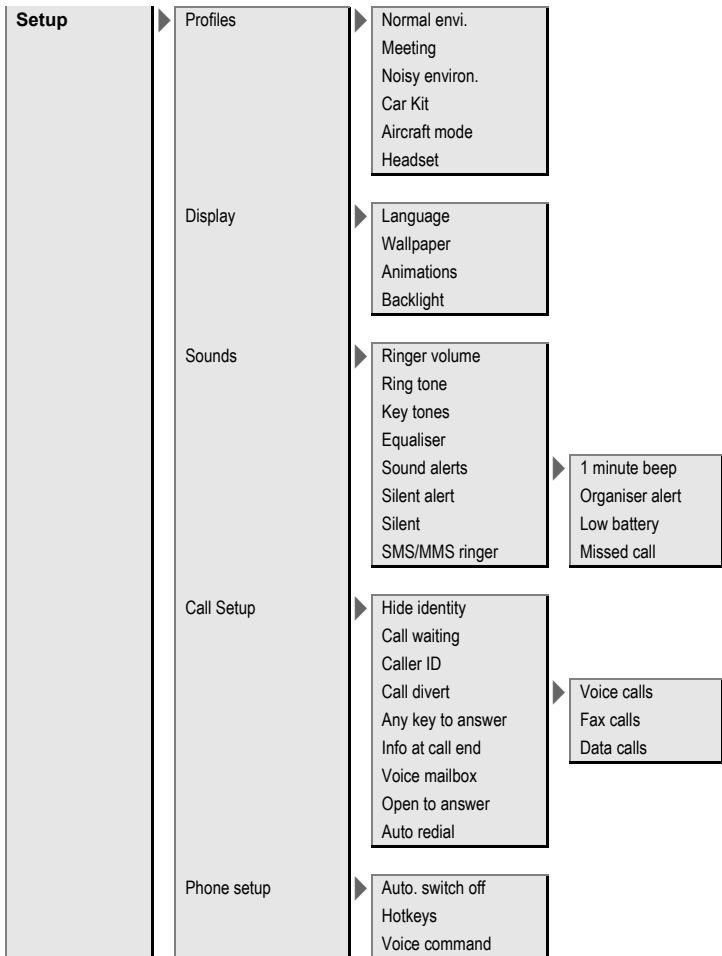

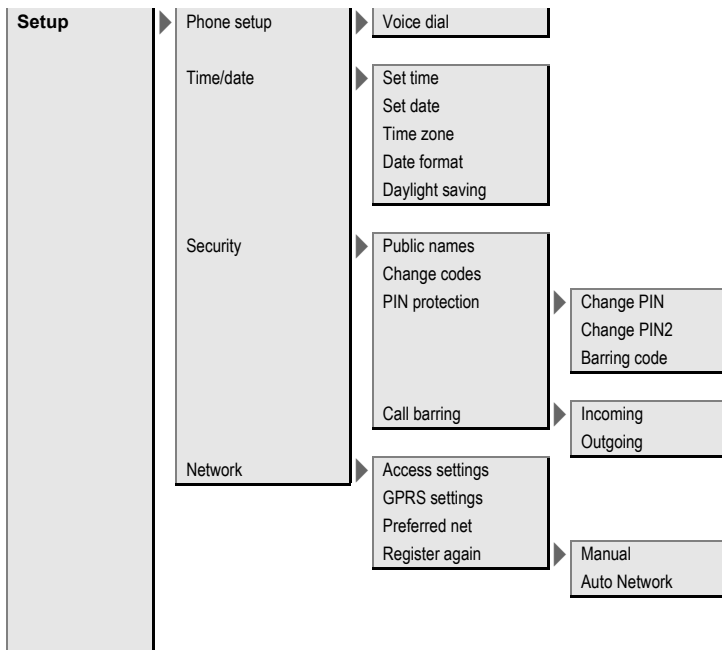

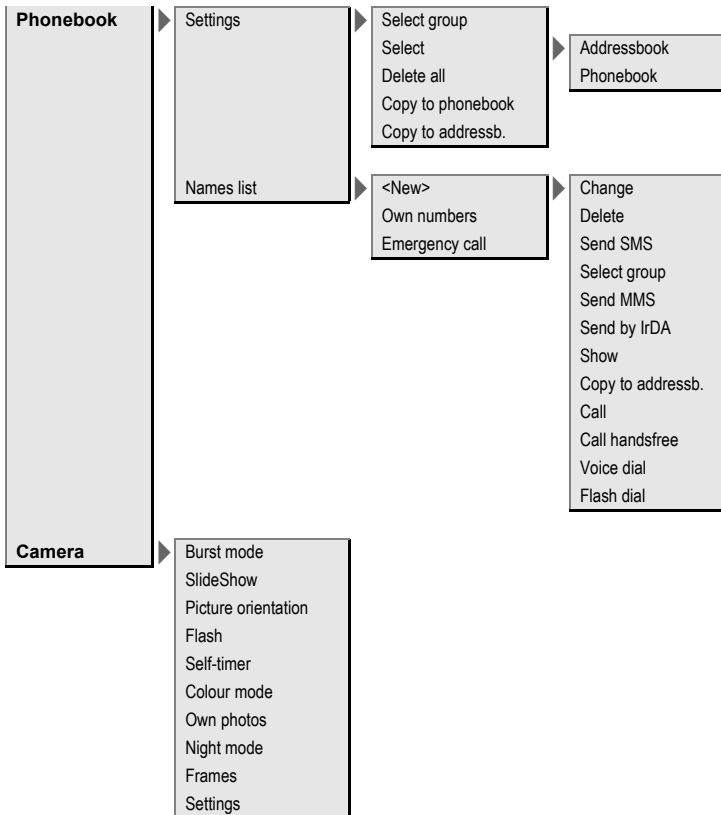

# Index

- A**
- Alarm (alarm clock) ..... 50
  - All calls (diversion) ..... 46
  - Animation ..... 44
  - Any key answer ..... 46
  - Appointment
    - See Events ..... 49
  - Auto. redial ..... 20
- B**
- Battery
    - Charge..... 10
    - Insert..... 9
    - Operating time ..... 11, 57
  - Bookmarks ..... 41
  - Browser..... 40
- C**
- Calculator..... 50
  - Calendar..... 49
  - Call
    - Accept ..... 20
    - Charges ..... 26
    - Conference..... 22
    - End..... 20
    - Hold ..... 21
    - Menu..... 21
    - Reject ..... 20
    - Swap (change)..... 21
  - Call records ..... 26
  - Call waiting ..... 45
  - Call with handsfree..... 21
  - Calls dialled (call record) ..... 26
  - Calls received (call record) ..... 26
  - Camera
    - Options ..... 28
    - Switch on ..... 27
    - Taking a photo..... 28
  - Car Kit..... 44
  - Care of phone ..... 56
  - Cell Broadcast (CB)..... 38
  - Change Barring code..... 17
  - Charges
    - Cost limit ..... 26
  - Charging the battery ..... 10
  - Chinese festivals ..... 51
  - Clearing SIM card barring ..... 17
  - Clock ..... 47
  - Codes ..... 16
  - Conference ..... 22
  - Connecting to Windows® PCs ..... 39
  - Copying entries
    - from SIM card ..... 24
  - Copying SIM entries ..... 12, 25
  - Credit limit..... 26
- D**
- Dialling code..... 20
  - Dialling with number keys ..... 20
  - Display
    - Symbols ..... 8
  - Divert ..... 45
  - Durat/charges ..... 26
- E**
- E-mail
    - Receive/read..... 36
    - Settings ..... 37
    - Write..... 36
  - Emergency number
    - Emergency call ..... 25
    - SOS..... 12
  - Euro converter ..... 50
  - Events ..... 49
  - Extras ..... 50

- 
- G**
- Games and more ..... 42
  - GPRS ..... 47, 48
  - Groups ..... 25
  - Guarantee certificate ..... 58
  - Guarantee certificate (IRL) ..... 59
- H**
- Handsfree talking ..... 21
  - Headset..... 44
  - Hide ID ..... 45
  - Highlighting mode..... 15
  - Hold call..... 21
  - Holiday (Organiser) ..... 49
  - Horoscope..... 51
  - Hotline ..... 54
- I**
- Information services (CB)..... 38
  - Infrared
    - see IrDA..... 39
  - International dialling code ..... 21
  - Internet..... 40
  - IrDA ..... 39
    - Receive data ..... 39
    - Send data ..... 39
- J**
- Java..... 42
- L**
- Loss of phone, SIM card ..... 57
  - Lunar calendar ..... 51
- M**
- Main menu..... 13
  - Maintenance of phone..... 56
  - Meeting (Organiser) ..... 49
  - Memory status ..... 52
  - Menu
    - Controls..... 14
    - Menu tree..... 61
  - Message
    - CB..... 38
    - e-mail ..... 36
    - MMS ..... 31
    - SMS ..... 29, 30
  - Minute alert..... 45
  - Missed calls (call record) ..... 26
  - MMS
    - Manage folders ..... 33
    - Read ..... 33
    - Receive ..... 32
    - Settings ..... 34
    - Write..... 31
  - Multimedia
  - Messaging Service ..... 31
  - My stuff ..... 52
- O**
- Operating times (battery)..... 11, 57
  - Organiser..... 49
  - Own (phone) numbers..... 25
- P**
- Phone data ..... 57
  - Phone number transmission..... 45
  - Phonebook ..... 23
    - Entering contacts ..... 23
    - Find entry/Call..... 24
    - Groups..... 25
    - Settings ..... 25
    - View entry ..... 24
  - Picture Album ..... 53
  - PIN
    - Change ..... 17
    - Control..... 16
    - Enter..... 12
  - Product data ..... 57
  - Profiles (telephone) ..... 44

- 
- R**
- Records ..... 26
  - Redial ..... 20
  - Ringtones ..... 44
- S**
- Safety precautions ..... 2
  - Saving contacts ..... 23
  - Security ..... 16
  - Settings ..... 44
  - Short message (SMS) ..... 29
  - Signal strength ..... 13
  - Silent alert ..... 45
  - SIM card
    - Clear barring ..... 17
    - Insert ..... 9
  - SIM services ..... 50
  - SMS
    - Archive ..... 29
    - Read ..... 30
    - To group ..... 29
    - Write ..... 29
  - SOS ..... 12
  - Sound album ..... 52
  - Special characters ..... 18
  - Speech time (battery) ..... 57
  - Standard functions ..... 15
  - Standby mode ..... 14
  - Standby time ..... 11
  - Surf & fun ..... 40
  - Swap between calls ..... 21
  - Switch off phone
    - Automatic ..... 46
    - Manually ..... 12
  - Switch on phone ..... 12
  - Symbols ..... 8
- T**
- T9
    - Text entry ..... 19
    - Word suggestions ..... 19
  - Task (Organiser) ..... 49
  - Technical data ..... 57
  - Time zones ..... 47
  - Transferring calls ..... 45
- U**
- Unanswered ..... 46
  - Upper and lowercase letters ..... 18
  - User Guide symbols ..... 14
- V**
- Volume
    - Handset volume ..... 20
    - Profiles ..... 44
- W**
- Wallpaper (display) ..... 44
  - WAP ..... 40